

Bin-Temp 612 & 1821

OPERATING INSTRUCTIONS

1. Push the switch to the **ON** position.
2. Plug the jackhandle into the cable receptacle.
3. Set the rotary thermocouple switch on #1 position (the reading at the bottom of the cable) and record the temperature. Repeat for the remaining number of thermocouples on each respective cable.
4. *A negative number, Larger than -50* in the display number area indicates an open thermocouple or no reading.
5. One 9-volt battery operates this unit. To service, remove battery door and replace the battery.

NOTE: If reading stations are at a location where the temperature is other than room temperature, let the instrument standardize to that temperature for a period of approximately 30 minutes before recording any readings.



Tri-States Grain Conditioning, Inc.
P.O. Box 468 • Spirit Lake, IA 51360 • 712-336-0199 • FAX: 712-336-0299
SALES • SERVICE • INSTALLATION • MANUFACTURING